

w181 Linier pro

Instructions


Page 1 / 4

Wästberg
Box 5085
200 71 Malmö
Sweden
wastberg.com




1.


a)

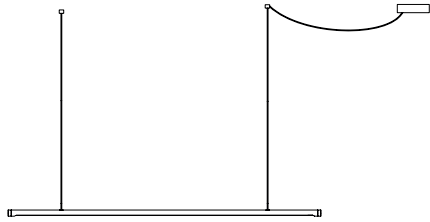


b)

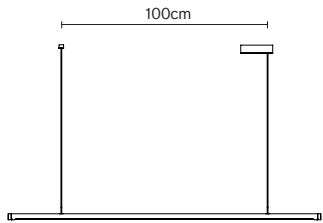


4.

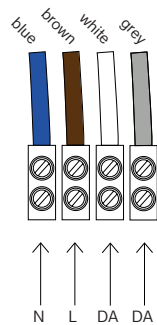


2.

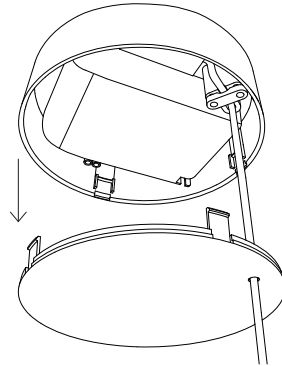


5.

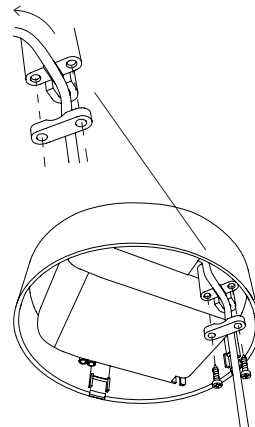

3.

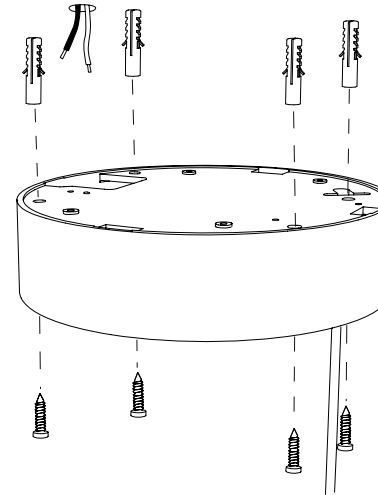


6.

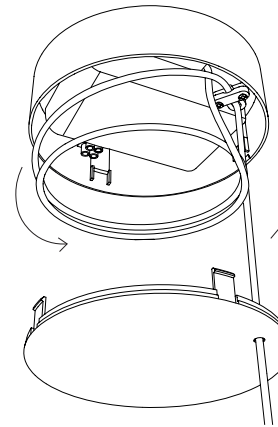


EN Mounting instructions

1.
There are two options to mount the luminaire.
The distance between the cables is 100cm / 200cm.
2.
Remove the lid from canopy.
3.
Mount the canopy to the ceiling.
(screws are not included)
4.
Connection the wires to the clamp.
5.
To adjust the cable length, release the strain relief.
Pull the cable to desired length and re-attach the strain relief.
6.
Roll the cable inside the canopy and attach the lid.


7.

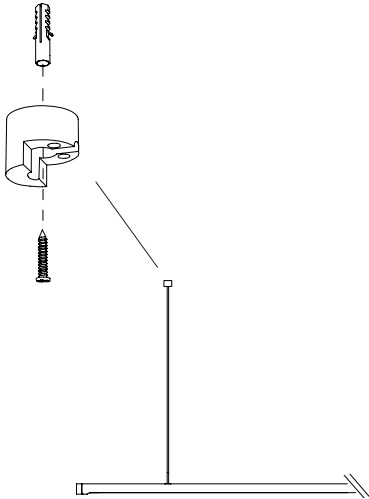

8.

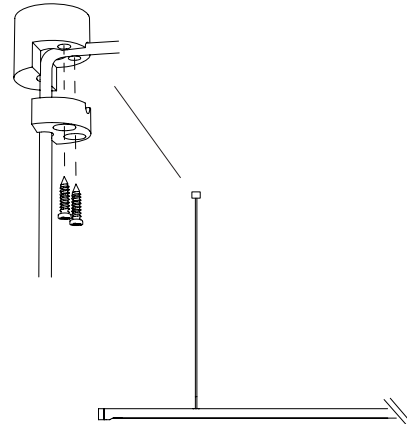

9.

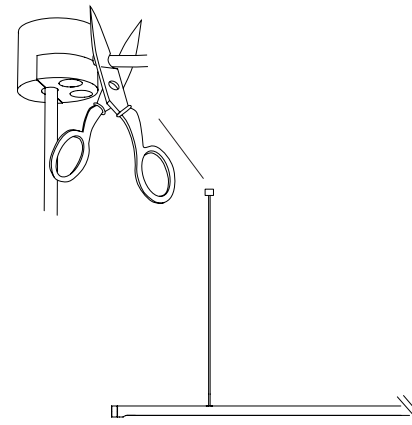

EN Mounting instructions

7.

Mount the ceiling rose.

8.

Pull the cable through the ceiling rose and attach the lid.


 
9.

Cut the cable to your required length.

10.

Control the light via Dali.

10.

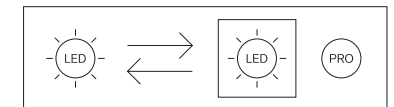

This product contains a light source of energy efficiency class D. The light source is replaceable by Wästberg or by a professional with explicit authorisation. For more information please contact your local Wästberg customer service point.

w181 Linier pro Instructions


Page 3 / 4

Wästberg
Box 5085
200 71 Malmö
Sweden
wastberg.com




1.


a)

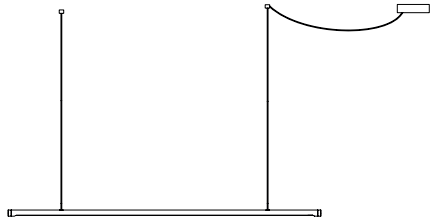


b)

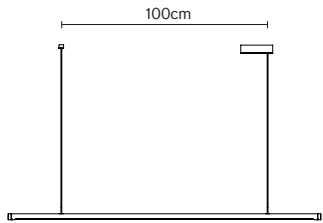


4.

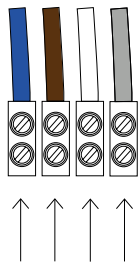


2.

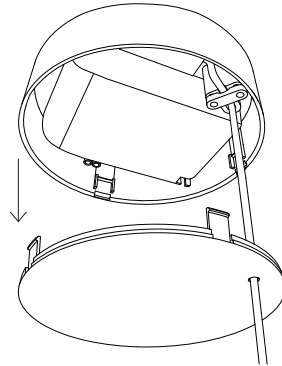


5.

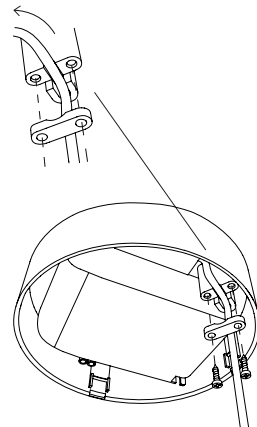

3.

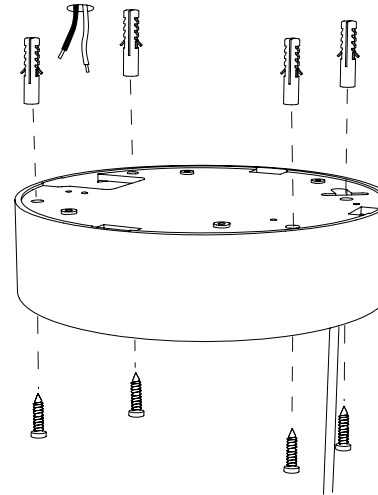

6.

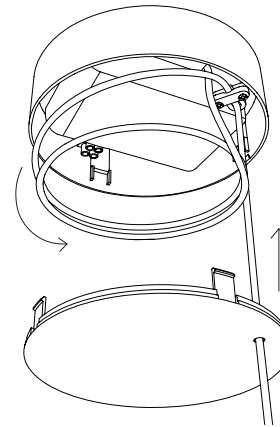

sv Monteringsanvisningar

1.

Det finns två alternativ för att montera armaturen.
Avståndet mellan kablarna är 100 cm/200 cm.

2.

Ta bort locket från takkåpan.

3.

Montera takkåpan i taket.
(skruvar ingår ej)

4.

Anslut kablarna till klämman.


5.

För att justera kabellängden, lossa dragavlastningen.
Dra kabeln till önskad längd och sätt tillbaka dragavlastningen.


6.

Rulla in kabeln i takkåpan och sätt på locket.


7.

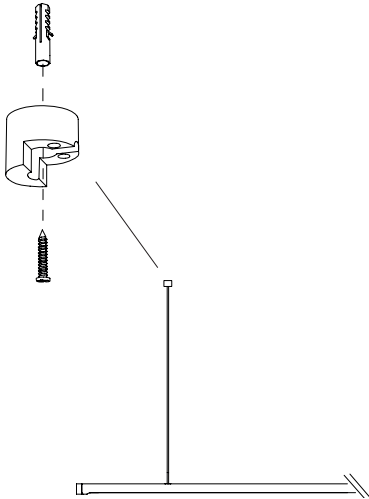


8.

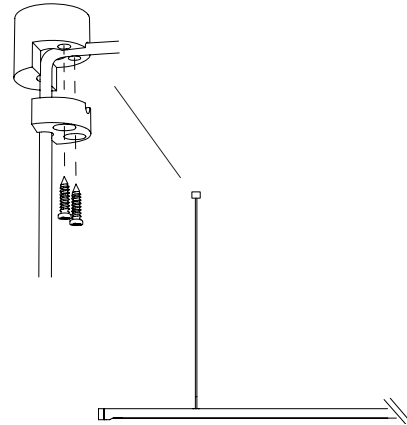

9.

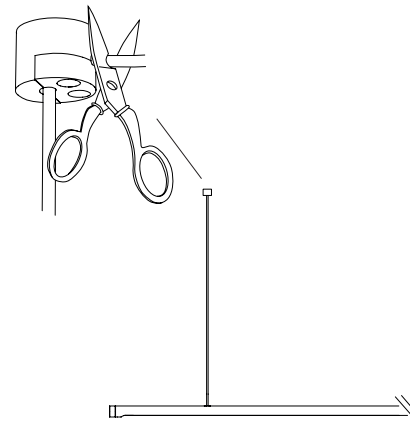

 10.



sv Monteringsanvisningar

7.

Montera takrosetten.

8.


Dra kabeln genom takrosetten och sätt på locket.

9.

Klipp kabeln till önskad längd.

10.

Styr belysningen via Dali.

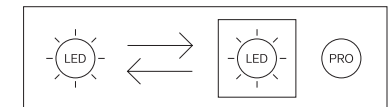

Denna produkt innehåller en ljuskälla med energieffektivitetsklass D. Ljuskällan kan bytas ut av Wästberg eller av en professionell med uttryckligt tillstånd. För mer information, kontakta din lokala Wästberg-kundtjänst.