


*Ethnicraft*ASSEMBLY INSTRUCTIONS FOR BED INSTALLATION

POLISHED IMPERFECT BED - WITHOUT SLATS

CODE	DESCRIPTION
51401-U	OAK POLISHED IMPERFECT BED - WITHOUT SLATS 160/200/105
51402-U	OAK POLISHED IMPERFECT BED - WITHOUT SLATS 180/200/105

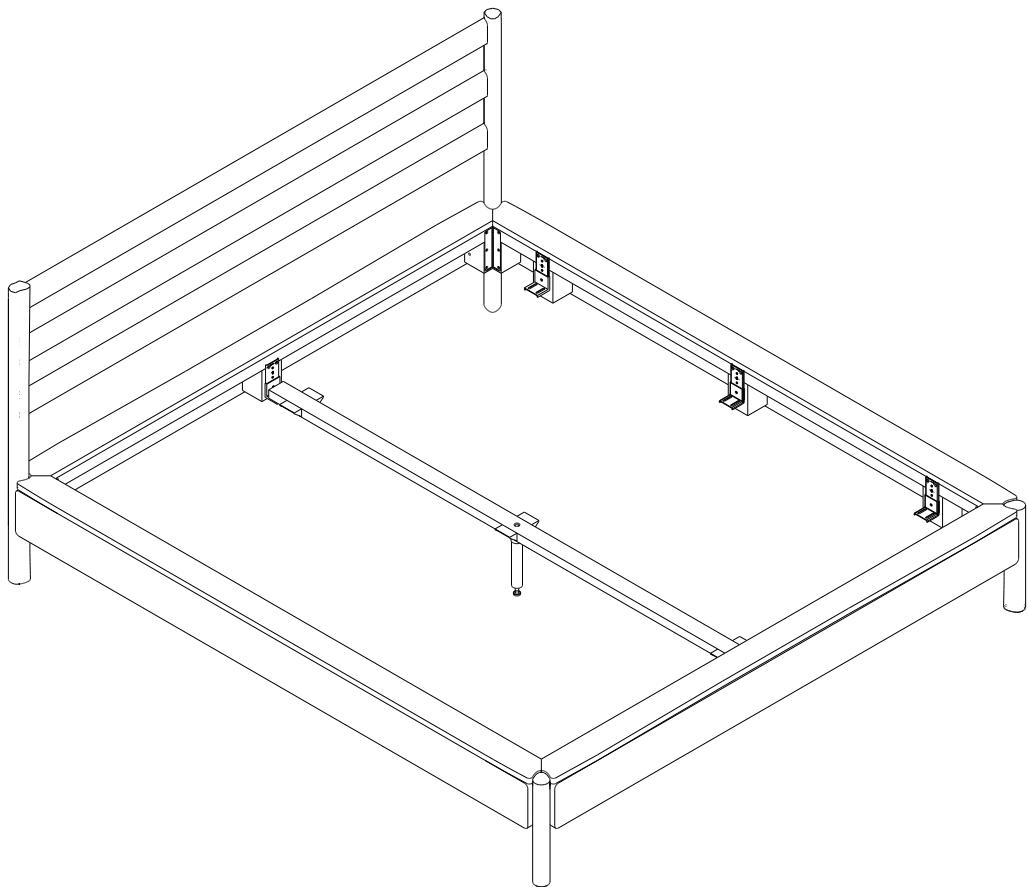


Ethnicraft


OAK POLISHED IMPERFECT BED - WITHOUT SLATS ASSEMBLY INSTRUCTIONS FOR BED INSTALLATION



NOTE




- CAREFULLY OPEN THE CARTON,
- REMOVE CONTENTS AND LAY OUT ON CARPET OR THE PACKAGING CARTON BOX OR OTHER PROTECTIVE SURFACE TO AVOID DAMAGE.
- CHECK PACKAGE CONTENTS TO ASSURE ALL THE NECESSARY HARDWARE AND PARTS ARE RECEIVED UNDAMAGED.
- DO NOT USE DAMAGE OR DEFECTIVE PARTS/HARDWARE.
- CONTACT ETHNICRAFT FOR ANY MISSING PART AND/OR HARDWARE.
- READ ASSEMBLY INSTRUCTIONS BEFORE INSTALLATION, CAREFULLY FOLLOWING THE DIRECTIONS GIVEN.
- SEEK PROFESSIONAL ADVICE IF YOU ARE NOT FAMILIAR WITH DIRECTIONS OF THIS INSTALLATION OR IF YOU HAVE ANY DOUBTS ABOUT SAFETY.
- IT IS ADVISED TO CONDUCT THIS ASSEMBLY WITH A MINIMUM OF 2 PERSONS.




X2

PARTS TO ASSEMBLE

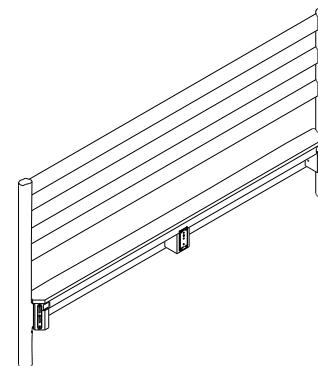


A BED HEAD 1 piece

CODE	DESCRIPTION
P5026	BED HEAD FOR 180 WIDTH
P5027	BED HEAD FOR 160 WIDTH

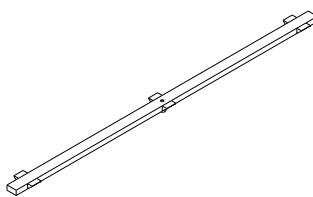


D CENTRAL SUPPORT 1 piece

CODE	DESCRIPTION
H1425	CENTRAL SUPPORT

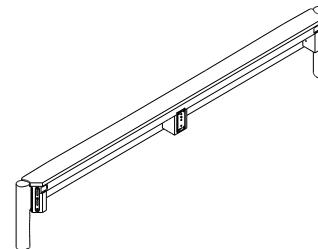


B FOOTBOARD 1 piece

CODE	DESCRIPTION
P5028	FOOTBOARD FOR 180 WIDTH
P5029	FOOTBOARD FOR 160 WIDTH



E CENTRAL LEG 1 piece

CODE	DESCRIPTION
H1426	CENTRAL LEG

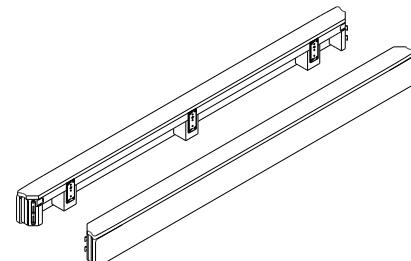

C SIDERAIL 1 set (left & right)



CODE	DESCRIPTION
P5030	SIDERAIL

Ethnicraft

OAK POLISHED IMPERFECT BED - WITHOUT SLATS ASSEMBLY INSTRUCTIONS FOR BED INSTALLATION



HARDWARE ENCLOSED

		
H02016 L BRACKET (8pcs)	H2379 L CONNECTOR (4pcs)	H0998 WOOD SCREW Ø4x25 (24pcs)

		
H0983 COUNTERSUNK SCREW M6x50 (1pc)	H0828 JCBC SCREW M6x20 (4pcs)	H2017 JCBC SCREW M6x6 (8pcs)

TOOL ENCLOSED


(Included in package)



H0745
ALLEN KEY

TOOLS REQUIRED

(Not included in package)

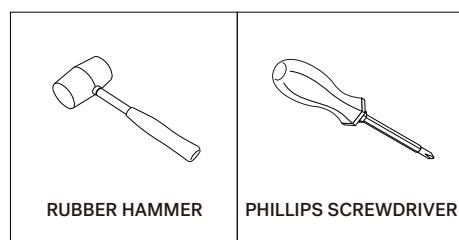

RUBBER HAMMER

PHILLIPS SCREWDRIVER

SYMBOLS



DIRECTION



NUMBER OF
PERSONS NEEDED



USE PHILLIPS SCREWDRIVER
TO TIGHTEN



USE ALLEN KEY
TO TIGHTEN






USE RUBBER
HAMMER



USE HAND



A ATTACHING SIDERAIL + FOOTBOARD + HEADBOARD

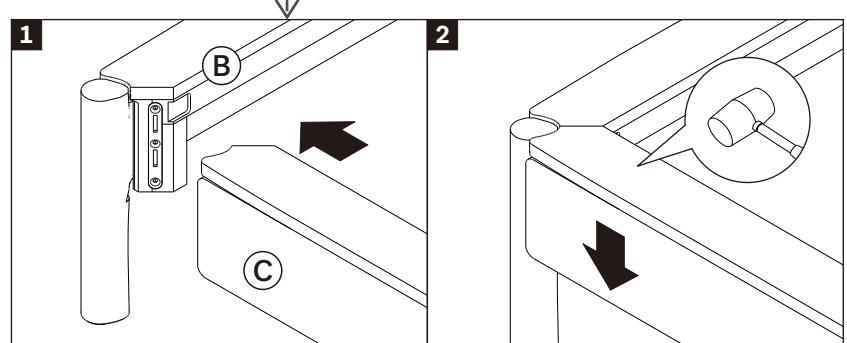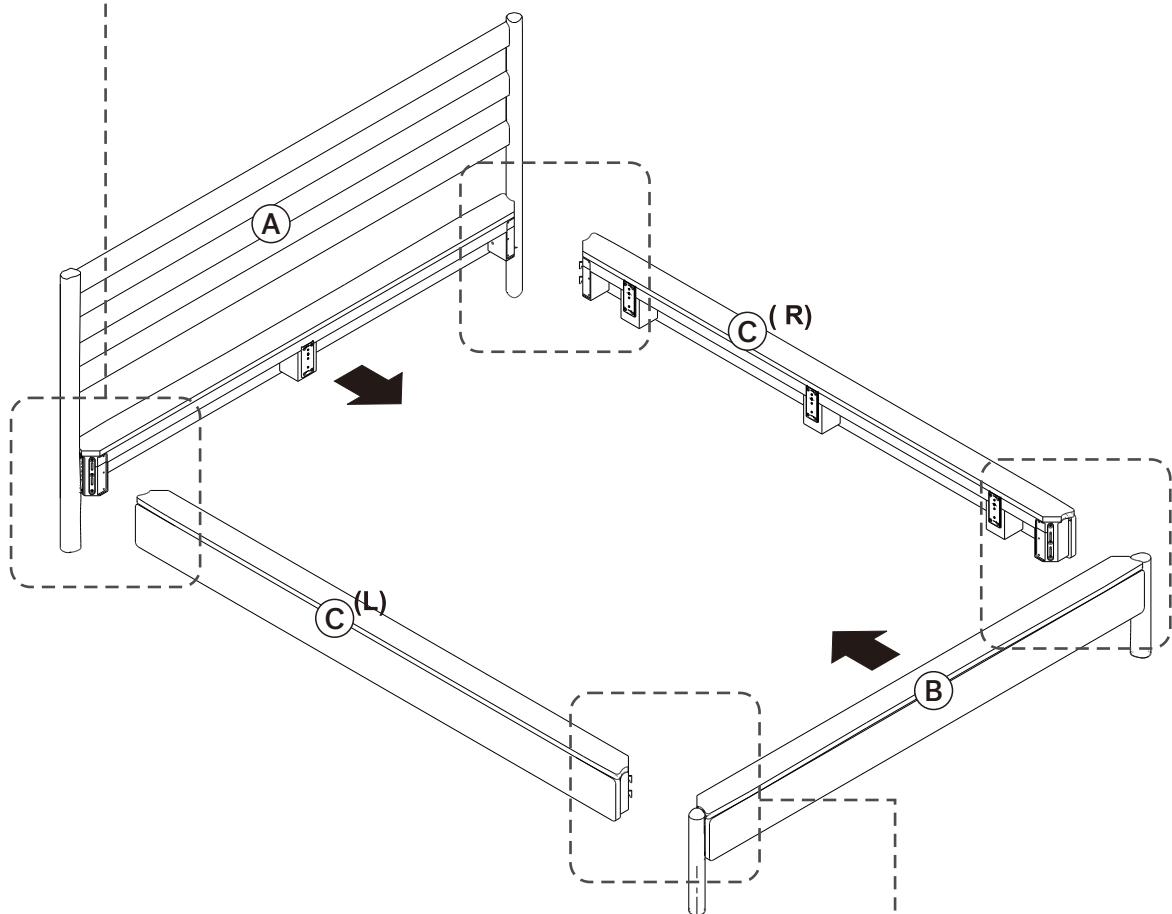
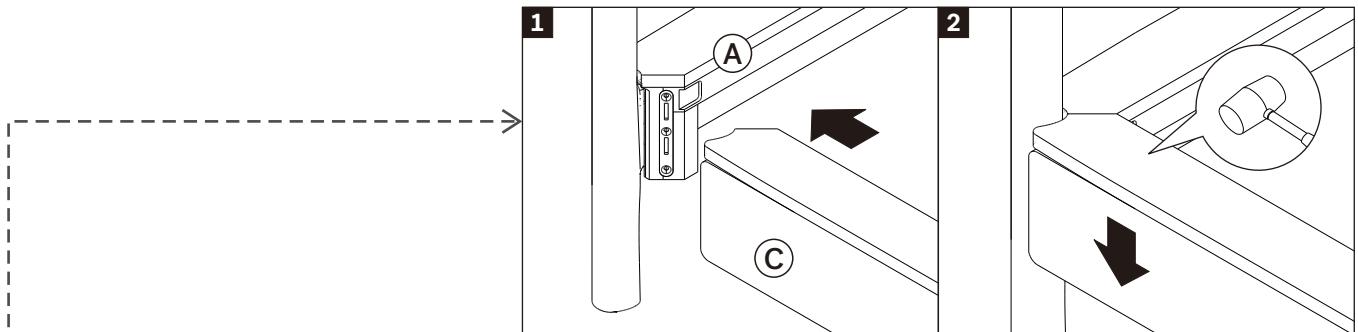


Ethnicraft

OAK POLISHED IMPERFECT BED - WITHOUT SLATS ASSEMBLY INSTRUCTIONS FOR BED INSTALLATION





B ATTACHING L CONNECTOR

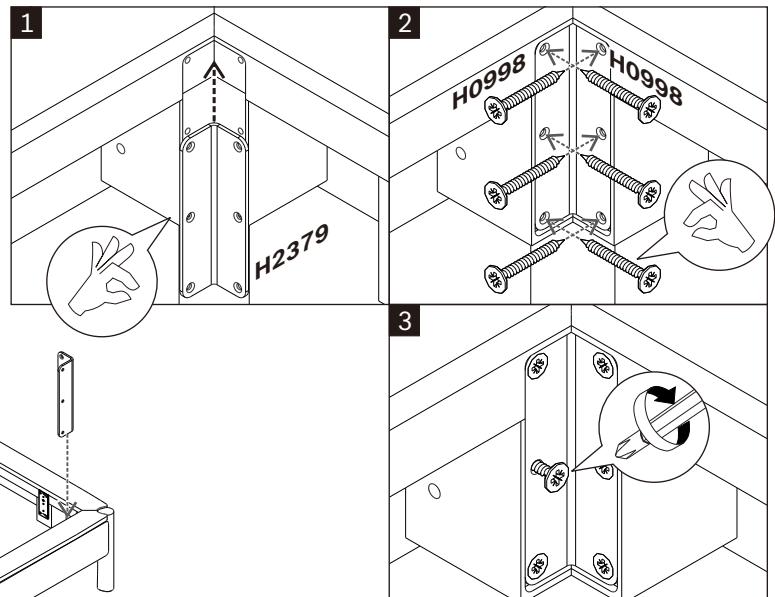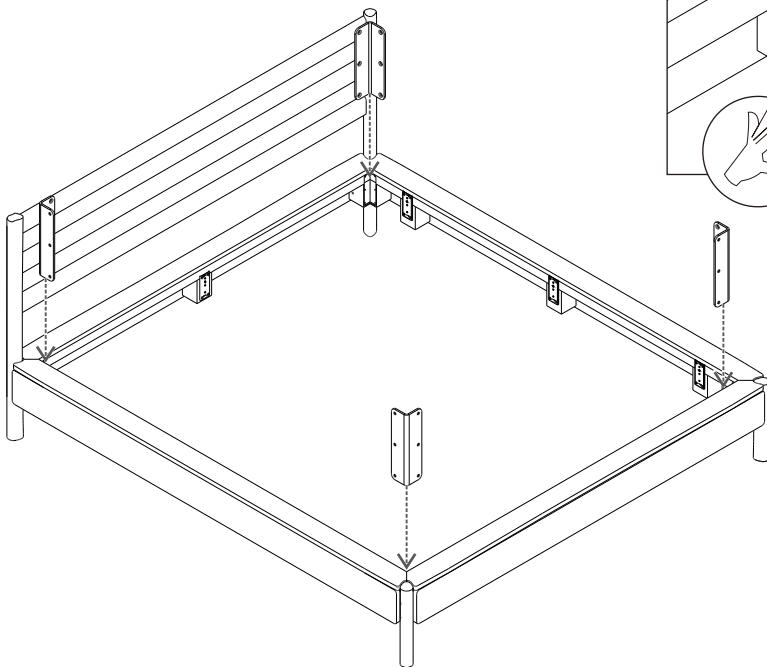

! - USE WOOD SCREW Ø4x25 (24X)
- TIGHTEN FULLY

C ATTACHING CENTRAL LEG TO CENTRAL SUPPORT

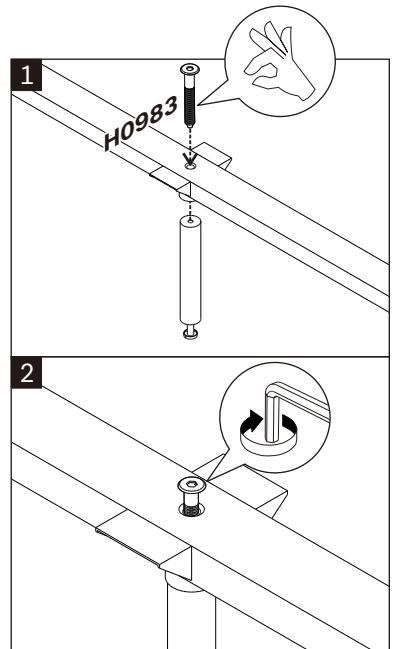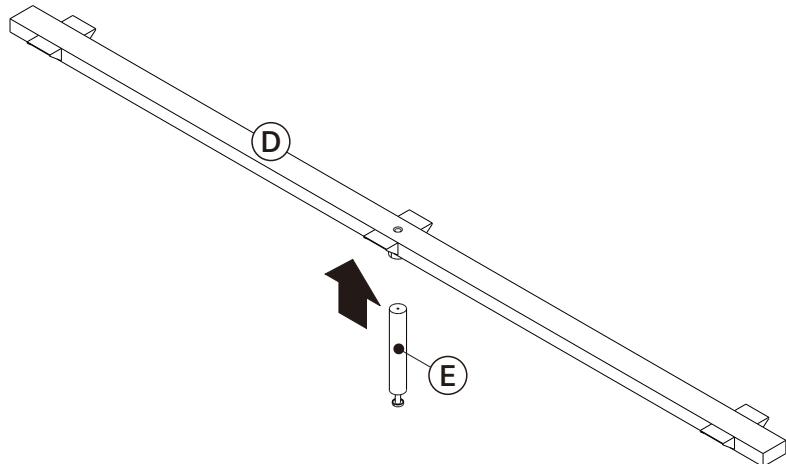



! - USE COUNTERSUNK SCREW M6x50mm (1X)
- TIGHTEN FULLY

Ethnicraft

OAK POLISHED IMPERFECT BED - WITHOUT SLATS ASSEMBLY INSTRUCTIONS FOR BED INSTALLATION



D ATTACHING CENTRAL SUPPORT

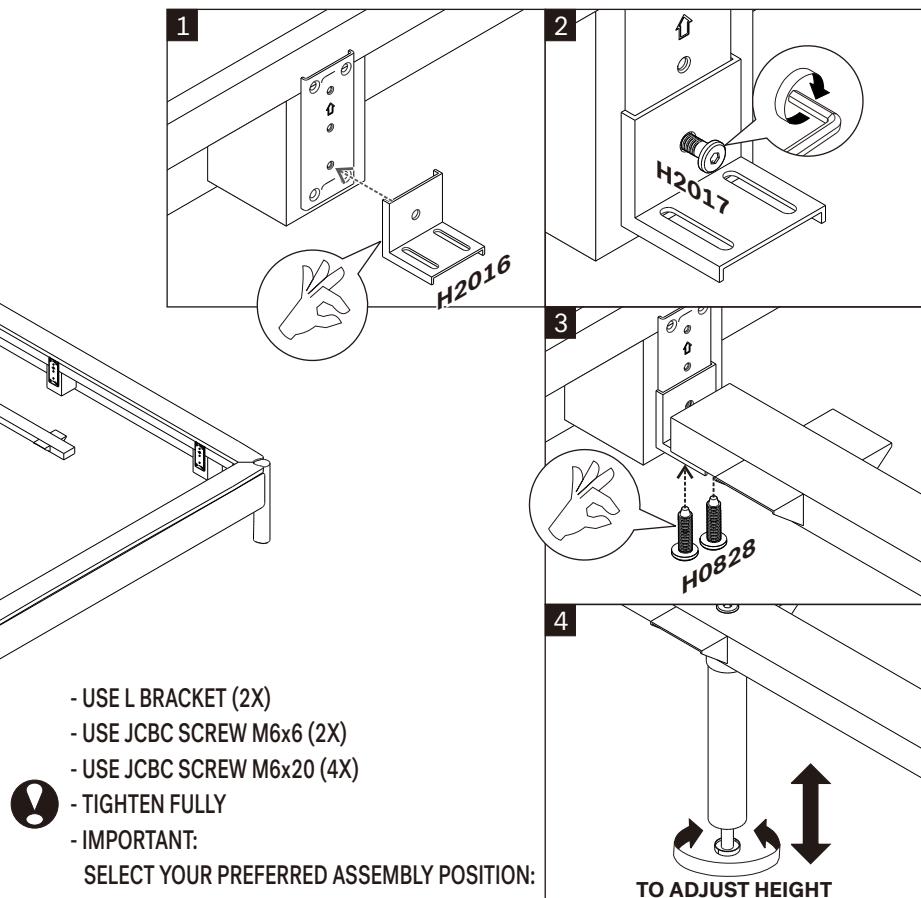
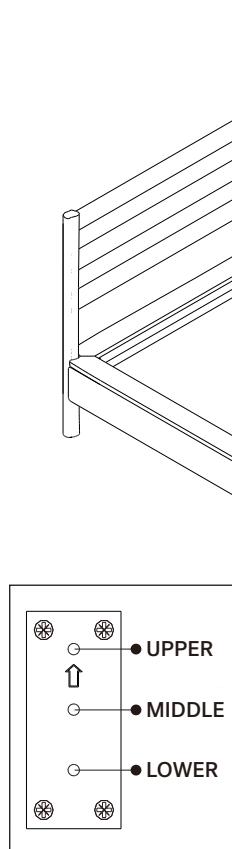


- USE L BRACKET (2X)
- USE JCBC SCREW M6x6 (2X)
- USE JCBC SCREW M6x20 (4X)

- TIGHTEN FULLY

IMPORTANT:
SELECT YOUR PREFERRED ASSEMBLY POSITION:
LOWER, MIDDLE, OR UPPER

E ATTACHING L BRACKET TO SIDE RAILS

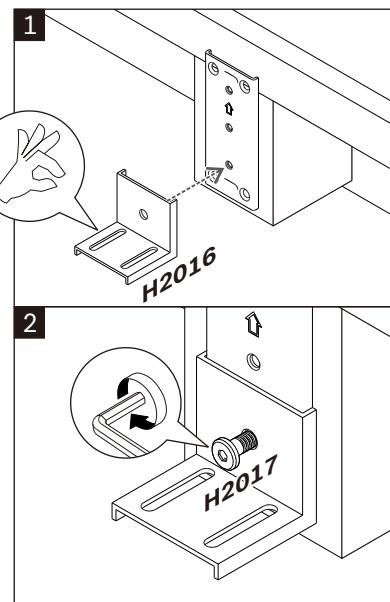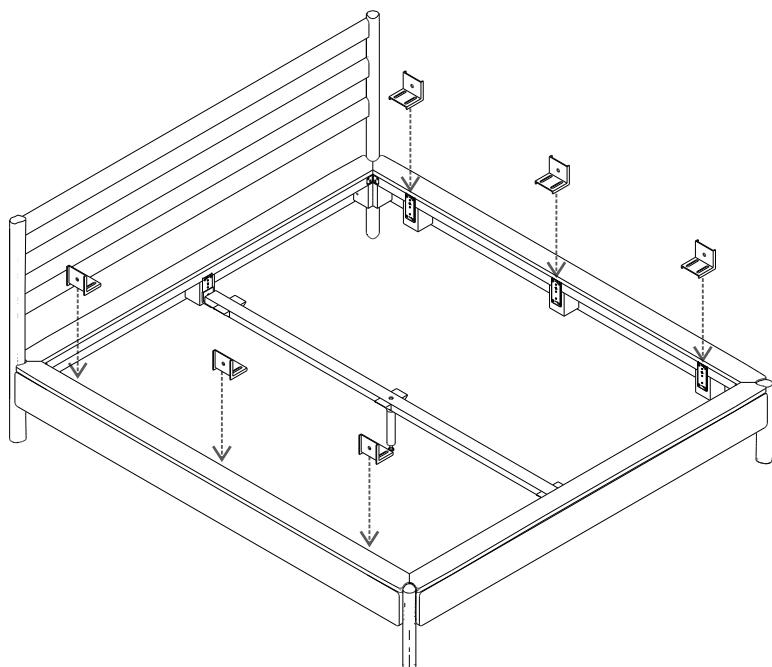

- USE L BRACKET (6X)
- USE JCBC SCREW M6x6 (6X)
- TIGHTEN FULLY
- ENSURE ALL L BRACKETS ARE FITTED
AT THE SAME LEVEL AS THE CENTRAL SUPPORT